


# T85 Trail Camera

## User Manual

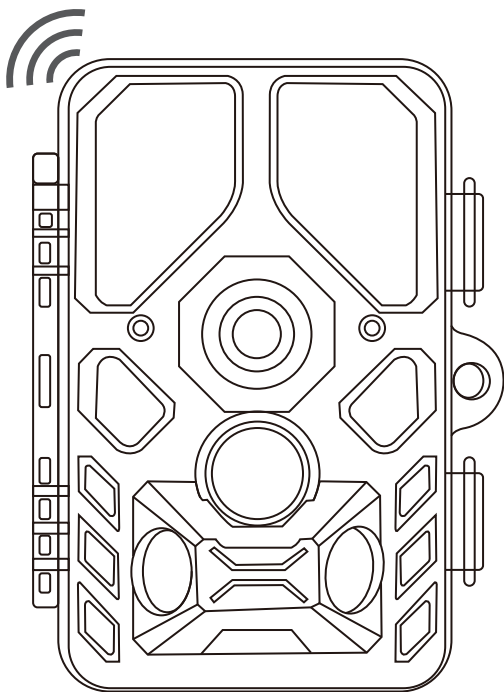

**CamPark®**



# 1. Contents of box

Carefully unpack camera and check that all of the following components are contained in the box:

1. Wildlife Camera
2. Mounting Belt
3. USB Cable
4. Instruction Manual



## Note:

- Remove the protective foil from the camera lens.
- Caution! Keep plastic foil and bags away from babies and small children, as otherwise danger of suocation.





## 2.Contents

1.CONTENTS OF BOX .....	1
2.CONTENTS .....	2
3.HAZARD, SAFETY AND WARNING NOTICES .....	3
4.INTRODUCTION .....	5
5.YOUR CAMERA .....	6
5.1.Front view .....	6
5.2.Inside views .....	7
6.PREPARING THE CAMERA .....	8
6.1.Opening and closing the camera .....	8
6.2.Inserting the batteries .....	9
6.3.Inserting the memory card .....	10
6.4.External power supply .....	11
6.5.Assembly with strap .....	11
6.6.Operation graphi expression .....	12
7.USING THE CAMERA .....	13
7.1.Mode switch .....	13
7.2.Operating buttons .....	13
7.3.Settings .....	15
7.4.WIFI APP connection .....	20
7.5.Aligning the camera .....	29
7.6.Setting up the Live mode .....	30
7.7.Night recoding.....	31
7.8.File format .....	31
8.CONNECTING TO COMPUTER .....	32
9.technical SPECIFICATION .....	33
10.SIMPLE TROUBLE SHOOTING .....	35
11.SYSTEM INFORMATION, MAINTENANCE AND DISPOSAL .....	36
11.1.Care .....	36
11.2.Storage .....	36
11.3.Disposal .....	37



### **3. HAZARD, SAFETY AND WARNING NOTICES**

Incorrect use of the camera and accessories can be dangerous for you and others and can damage or destroy the camera. We therefore ask you to read and strictly observe the following Hazard, safety and warning notices.

#### **Intended use**

- This camera is intended for taking digital photos and video clips. It has been designed for private use and is not suitable for commercial purposes.

#### **Hazards for children and persons with limited ability to operate electronic equipment**

- The camera, accessory and packaging are not toys for children. These should therefore always be kept away from children. Danger of electrocution, poisoning and suffocation.
- The camera and accessory may not be used by children and persons with limited abilities. The camera may only be operated by persons physically and mentally able to operate it safely.

#### **Electrical hazard**

- Switch off the camera and remove the batteries if a foreign body or liquid has entered the camera. Let all parts dry thoroughly. Otherwise danger of fire or electrocution
- Switch off the camera and remove the batteries if the camera has been dropped or the housing is damaged. Otherwise danger of fire and electrocution.
- The camera may not be dismantled, modified or repaired. Danger of fire and electrocution.
- Only use a power adaptor (not supplied) with the mains voltage specified on the rating plate (6V). Otherwise danger of fire or electrocution. Disconnect the power by pulling the power adaptor out of the socket.
- A plugged in power adaptor (not supplied) can continue to use power and the refore represents a hazard source.
- The power supply may not be used during thunderstorms. Otherwise danger of electrocution.

## **DAMAGE FROM HEAT-FIRE HAZARD**

- Do not leave the camera in places that are susceptible to considerable increases in temperature (e.g. a vehicle). The housing and internal parts may be damaged, which in turn could cause a fire.
- Do not wrap up camera or place on textiles. This could produce a build up of heat in the camera that can cause deformation of the housing and may represent a fire hazard.

## **INJURIES AND MATERIAL DAMAGE**

- Only place the camera on sturdy surfaces. The camera could otherwise fall or topple over, causing damage or injury.
- Do not operate the camera whilst running or driving. You could fall or cause a traffic accident.
- Only use a mains adaptor (not supplied) for the camera, having the input voltage specified on the rating plate (6V). We do not accept any liability for damage caused by the use of an incorrect mains adaptor.
- The 230V socket used for the mains adaptor (not supplied) must not be covered and accessible at all times so that the mains adaptor can be quickly disconnected from the mains, when required.
- Ensure adequate ventilation and do not cover the mains adaptor (not supplied) to avoid overheating.
- Do not place any open ignition sources, such as lit candles onto or close to the device.
- Do not subject the LCD monitor to impact or pressure. This could damage the glass of the monitor or the liquid could leak from the inside. In case of contact with eyes or skin, rinse immediately with clear water. In case of contact with eyes contact a doctor immediately.
- Damage to the electronics, the monitor or the lens caused by external influences such as impacts, falls or other are not covered by the warranty and must be paid for.
- Do not drop or bump the camera and always handle it carefully. Otherwise the camera can be damaged.

## 4. INTRODUCTION

The Camera is a wildlife and surveillance camera with a 3 zone infrared sensor. The sensor can detect sudden changes to the ambient temperature within an evaluation area. The signals of the highly sensitive infrared sensor (PIR, passive infrared sensor) switch on the camera, activating picture or video mode.

### Features of Wildlife Camera:


- 20 Megapixels CMOS sensor.
- 20 Megapixel photo and 1296P HD video.
- The unique sensor design offers a 120° wider angle of detection and improves the response time of the camera.
- 2.4-2.5GHz 802.11 b/g/n WiFi high-speed up to 150Mbps.
- WiFi function, you can preview, download, delete the taken photos and videos directly, take photos and videos, change settings, check battery and memory capacity in APP.
- During day, sharp and clear color images; during night time, clear black and white images.
- Bluetooth 5.0 with low power consumption can enter WiFi connection mode through Bluetooth wake-up system.
- Impressively quick trigger time (0.3 seconds).
- Spray water protected according to standard IP66.
- Lockable and password protection.
- Date, time, temperature, battery percentage and moon phase can be displayed on the images.
- Using the camera number function, locations can be encoded on photos.
- Where several cameras are used, this function allows easier identification of locations when viewing photos.
- Possible use under extreme temperatures of between -20°C to 60°C.
- Extremely low power consumption in standby operation providing extremely long operating times.  
(in standby mode up to 6 months with 8AA batteries).

### Areas of application


- Camera trap for hunting.
- Animal or incident observation.
- Motion triggered security camera for domestic, office or public use.
- Any internal and external surveillance, where evidence of an infringement has to be provided.

## 5. YOUR CAMERA


### 5.1. Front view

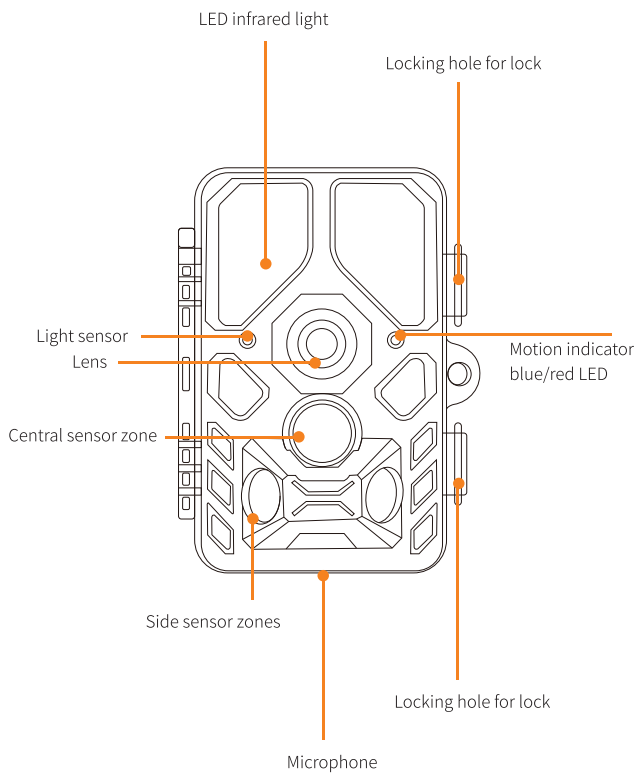

## 5.2. Inside views

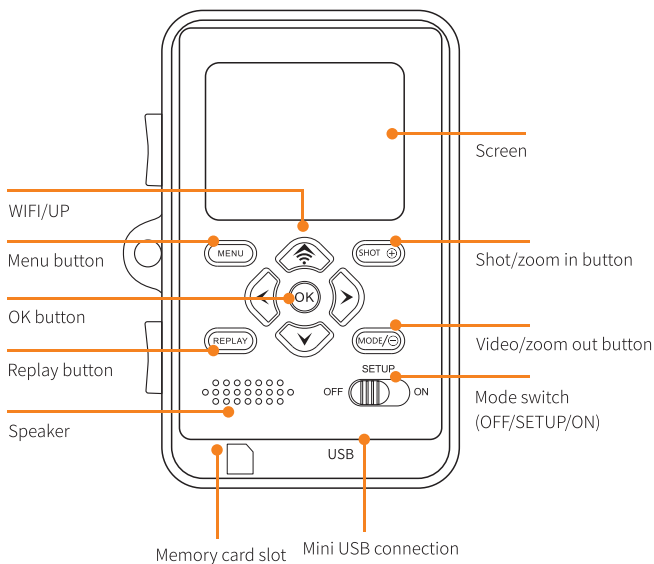


- The camera is only switched on in the SETUP mode for changing menu settings or viewing existing photos.
- An SD or SDHC memory card must have been inserted into the memory card slot in order to save photos/videos.
- Using the mini USB connection (USB 2.0), the camera can be connected to a computer.
- Using the mode switch the three operating modes OFF, SETUP and ON can be selected.

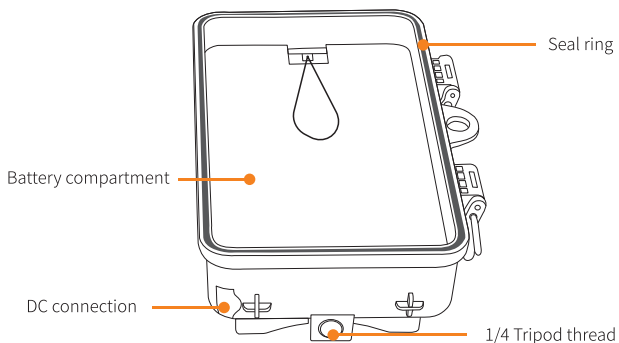

## 6. PREPARING THE CAMERA

### 6.1. Opening and closing the camera

Operating buttons, connections and batteries are located inside the T85 Camera.

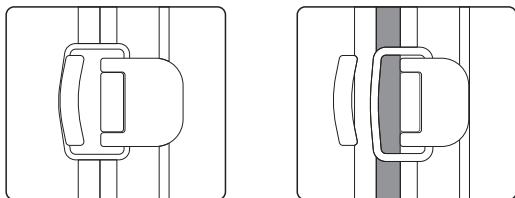


A fixing for a padlock is provided between the two locking brackets, allowing the camera to be securely locked.



## 6.2. Inserting the batteries

Open the camera as described in section 6.1 to insert the batteries. The battery compartment is housed in the right, rear part of the camera. Now open the protective cover of the battery compartment by pulling the clamping closure at the top slightly inwards before lifting off the cover.

First remove any existing batteries from the battery compartment. Insert 8 new batteries as shown in the below figure. When inserting batteries ensure correct position as marked for each battery in the battery compartment.

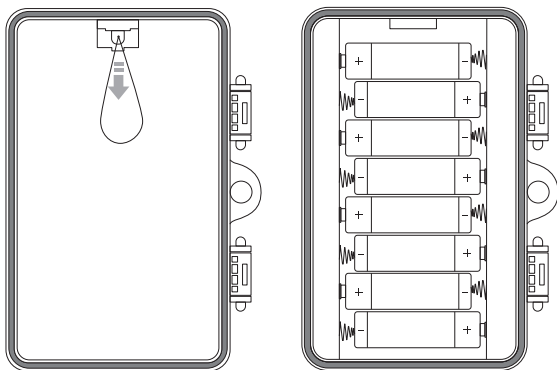


### Note:

- We recommend using 8 x alkaline AA batteries to ensure the camera's normal function.
- An alarm rings if battery power is too low.

### 6.3. Inserting the memory card

A memory card must have been inserted in order to save photos and videos. Insert a SD/SDHC memory card in the memory card compartment before switching on the camera.

- Switch off the camera and open as described in section 6.1.
- Prior to inserting the memory card ensure that the lateral write protection on the memorycard has not been activated (see figure).

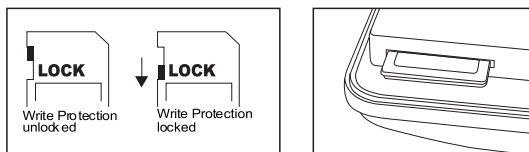

- If the camera displays "Card protected", remove the memory card and change the position of the memory protection.
- Insert the memory card as shown in the adjacent illustration. Push the memory card into compartment until it clicks into place.
- To remove the memory card push card in again until it is partly ejected.




#### Note:

- SD/SDHC memory cards up to a capacity of 128GB are supported.
- Our camera compatible with SD/SDHC memory cards Class 6 or above. Class 10 is recommended.
- Please format the SD/SDHC memory cards with our camera on the first use.



## 6.4. External power supply

The camera can be operated using power from an external power supply. A 6 V power supply with at least 2 A is required containing a connector with a 3.5 mm external and 1.35 mm internal diameter (internal positive pole, external negative pole ).

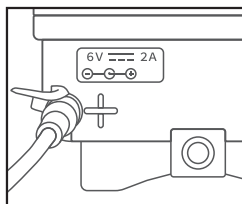

## 6.5. Assembly with strap

Use the securing strap supplied to attach the Wildlife Camera to a tree or another object. The illustrations below demonstrate how to fasten the securing strap.

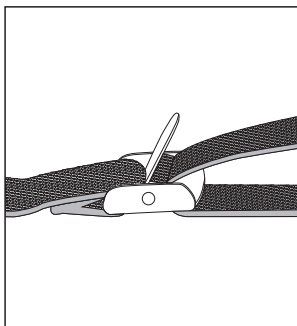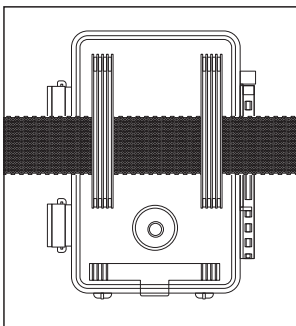

Position the Wildlife Camera as desired and pull the loose end of the securing strap tight until the camera is firmly secured.

To release the securing strap again, pull at the tab of the securing strap.

## 6.6 Operation graphi expression

 
Operation (see figures below):

Open the locking brackets and the protective cover of the battery compartment—insert batteries—insert memory card—switch to SETUP—enter system menu by pressing MENU button—choose to format memory card—choose to reset to factory (this step can be skipped)—choose to setup system time.


The power supply may not be used during thunderstorms. Otherwise danger of electrocution.




Open the battery cover.




 
Pls insert 8pcs batteries.  
Battery model:  
AA LR6



 Please ensure that the lateral write protection on the memory card has not been activated.



Insert CLASS6 or above SD/SDHC memory card in the memory card slot before switching on the camera and select SETUP mode to adjust settings.

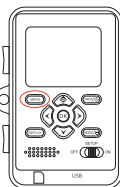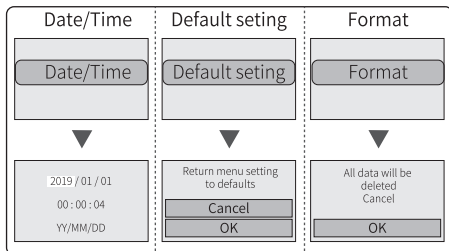

Press “MENU” to enter the system setup menu.

## 7. USING THE CAMERA

Prior to setting up the camera for surveillance, it must be set up for the respective purpose. For this purpose, there is a setup mode available. In addition to changing settings, photos and videos can be taken and existing photos can be viewed in this mode.


### 7.1. Mode switch

Open the camera as described in section 6.1. The Mode switch is located at the bottom edge on the left inside. 3 operating modes can be selected:

**OFF:** The camera is completely switched off in the OFF mode.


**SETUP:** Select SETUP mode to adjust settings and make or playback photos and videos.

**ON:** The camera is activated to take photos/videos automatically (Live mode).

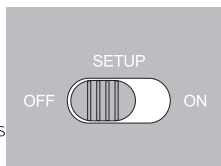

### 7.2. Operating buttons



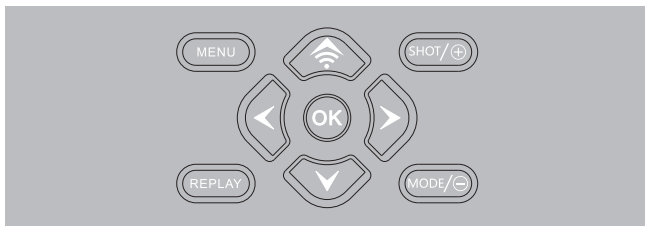

Set the mode switch to SETUP and the camera and monitor are switched on. Using the operating buttons different functions can now be activated and settings can be changed. For this purpose, the following operating buttons are provided on the display panel:



Turn on/turn off WIFI hotspot

## FUNCTIONS OF OPERATING BUTTONS IN RECORDING MODE










Below, the operating buttons are described in the recording mode with non activated menu.

-  Open the Settings menu using the MENU button.
-  Press this button to start the replay mode.
-  Change to the manual recording mode for video recordings or taking photos.
-  Manual take a video or photo depending on the set recording mode. Video recordings are also ended by pressing the SHOT button.

     No function(in standby mode).

## FUNCTIONS OF OPERATING BUTTONS IN REPLAY MODE

Below, the operating buttons are described in the replay mode with non activated menu.

-  Enter into deleting or protecting video or photo files.
-  Enter into or exit replay mode.
-  View existing pictures /videos backwards and drag up wards to view photo.
-  View existing pictures /videos forwards and drag down wards to view photo.
-  Drag right to view photos after zoom and skip ahead the video.
-  Drag left to view photos after zoom and skip back the video.
-  Start and pause replay of videos.
-  Zoom out the photos.
-  Zoom in the photos.

## FUNCTIONS OF OPERATING BUTTONS IN MENU SETTING

Below, the operating buttons are described in the replay mode with activated menu. (Recording and Replay mode).

**MENU**

Close the Main menu or any sub menu by pressing the MENU button.



Move up one menu point or increment value by 1.



Move down one menu point or decrease value by 1.



Move forwardly to the data setting.



Move backwardly to the data setting.

**OK**

Open selected options or accept selected settings.

Confirm each change to a setting by pressing OK. If the change is not confirmed by pressing the OK button, the new setting are lost when leaving the menu.

**REPLAY**

 
**MODE/⊖**

**SHOT/⊕**

No function (in MENU mode).

### 7.3. Settings

Prior to using the Camera, change the settings as required. Slide the mode switch of the Camera to the **SETUP** position to start the setup mode. In the Photo or Video mode press the MENU button to call up the menu. All menu options of the Camera and possible setting values for the recording mode are listed below. The standard setting is always highlighted in bold.





- **Mode :** Photo, Video, Photo + Video. Select whether photos or videos should be taken when motion is detected. When in the "Photo + Video" mode, the camera firstly takes a set number of photos prior to recording a video.
- **PIR Interval:** Defaulted 30seconds, optional from 5seconds ~60minutes  
The camera does not record any images or videos during the selected interval. This prevents the memory card from being filled with unnecessary shots.



#### Note:

- The shorter interval time, the higher camera shooting frequency. And this would lead to high consumption of batteries and shorten the batteries life. On the contrary, the interval time longer, the lower consumption of batteries for a longer usage time.
- The shortest 5s interval can only be accessed under Photo mode. In Photo + Video / Video mode, the shortest interval will be 10 seconds.
- **PIR Sensitivity:** High/ Medium/ Low
- **Time lapse:** Off/On When "on" has been selected, the camera would automatically takes photos in the selected time interval, irrespective of whether or not the PIR sensor has detected a motion or not. This is useful for observing cold blooded animals e.g. snakes or plants opening up, etc. As soon as the "On" setting has been confirmed by pressing the OK button, you can enter the interval time after which photos /videos are to be taken.



#### Note:

- In this mode, the PIR function would stop working, and the camera would take photos /videos in the setting interval time.



- **IR LED:** Auto/ Super Fine/ Economy. Set the infrared LEDs brightness.
- **Monitoring Period :** Off/On. Set timer to "On" if camera should only be active within a certain time. Once "On" has been confirmed with the OK button, the start and end time can be set.

For example, the camera is set the timer from 18:35 to 8:25 hrs, the camera will only operate in this period. Outside of this set period, the camera would not be triggered and would not take any photos or videos.

- **Side PIR Setup:** Off/On The two side PIR sensor zones provide a wide detection angle and detect more potential triggers. Sometimes you only wish to observe a certain point. Too many irrelevant triggers from the side sensor zones outside of this point continuously switch the camera on and off, considerably affecting battery life. In some situations it may be difficult to remove interfering branches or avoid sun light. In these situations you can switch off the side sensor zones.



- **Image size :** 20M(5120 x 3840), 16M(4608 x 3456), 12M(4032 x 3024), 8M(3264 x 2448), 5M(2592 x 1944), 3M(2048 x 1536), 2M(1600 x 1200)  
Select the desired resolution for photos. We recommend the resolution 5M. A higher resolution produces a somewhat better photo quality but results in larger files requiring more space on the memory card..
- **Picture NO :** 1P, 2P, 3P, 4P, 5P, 6P, 7P, 8P, 9P, 10P. Select the number of photos to be taken in succession when the camera is triggered in the Photo mode. Please also observe the parameter Interval!
- **Shutter speed:** 1/15, 1/20, 1/30



- **Resolution :** 1296P(1728 x 1296), 1080P (1920 x 1080, 30 fps), 720P (1280 x 720, 30 fps), 480 (848 x 480, 30 fps), 360(640 x 360, 30fps). Select the required video resolution. A higher resolution for a higher quality video, but it takes up more space of memory card. Videos are recorded in AVI format which can be played back on most video equipment.
- **Video Length :** Defaulted 10 seconds, optional 5 seconds~180 seconds Specify the duration of a video recording when the camera is triggered automatically. The recording period for videos is not limited in the SETUP mode.
- **Record Audio:** Off/On



- **Language:** Select the desired menu languageThe following languages are available: English, German, French, Spanish, Chinese, etc.
- **Default settings(Reset to factory) :** Cancel /OK. Press “OK” to reset the camera settings to the default values and confirm the selection by pressing the OK button.
- **Format:** Cancel/OK. All files are deleted by formatting the memory card. Press OK button and confirm formatting by selecting "OK". We recommend to format the memory card if it has already been used in other devices or if it is a new card. Caution: Ensure that files still required have been backed up prior to formatting!
- **Date / Time:** Set date and time
- **Time Format:** 12hour/ 24hour
- **Date Stamp:** On/Off. Select "ON" to print the date, time, temperature, battery percentage and moon phase on each photo or video. Otherwise select "Off".

- **Beep Sound:** On/Off
- **Camera name:** Trail Camera can only be used for photos not for videos  
You can use a combination of 10 digits and 26 letters to document the location on the photos and videos. It would be helpful to identify the photos and videos from which location when you set up several cameras in different positions.
- **Password Setting :** Off/On. After selecting "On" enter a four digit password to protect your camera against unauthorised access. This password must be entered each time the camera is switched on in the SETUP mode before the camera can be used.




### Note:

- If you forgot your password, please unlock the camera with password "OPEN".
- **WIFI SSID:** Campark-T85-\*\*\*\*\*  
You can use a combination of 10 digits and 26 letters to document the location on the photos and videos. When using several cameras this makes it easier to identify the location when viewing photos and videos.
- **Bluetooth:** Off/ On
- **WIFI Password:** Default 12345678
- **Auto WIFI Off:** 1Minute, 2Minutes, 3Minutes. If the camera turns on the WiFi hotspot, but the phone doesn't connect to the WiFi hotspot successfully within selected time, then WiFi hotspot will disconnect automatically and the camera will return to SETUP mode or ON mode.
- **Auto power off:** 3 min/5 min/10 min/Off. If there is no operation more than the selected time, then the camera will turn off automatically in SETUP mode.
- **Backlight timer:** 1Minute, 3Minutes, 5Minutes, Off. The LCD monitor would automatically turn off after the setting time.
- **Version:** Please check the software version.
- **MCU FW Update:** Developer use, users can ignore!


## 7.4. WIFI APP connection

Before using the wifi function, please install the APP application on the smartphone device. Please download and install the app from Google Play by searching “Hunting Camera Pro APP” for Android system and IOS system.

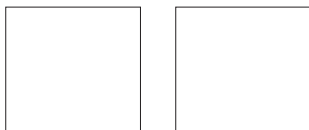


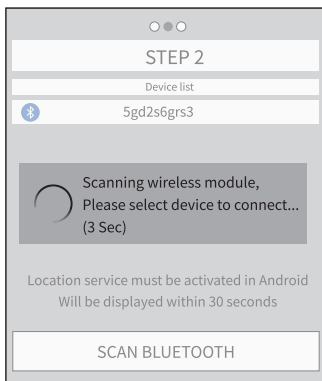
### 7.4.1. Connect the Bluetooth

Slide the mode switch of the camera to the TEST or ON position, and then turn on the mobile phone click the app and enter STEP1 as show in the following figure.

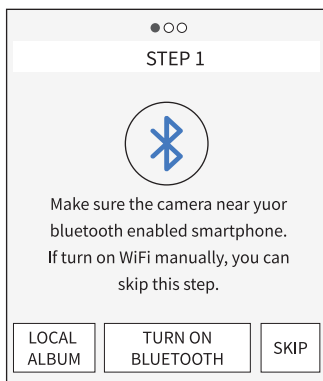


1. Click to enter “LOCAL ALBUM”, users can view the picture or video which they download before.


2. When the user doesn't want to use the Bluetooth function, just press the  button on the camera to open the WiFi directly. And press "Skip" in the APP to enter Wifi interface.
3. Click "TURN ON BLUETOOTH", and turn on the Bluetooth accordingly to the prompt of the APP. The APP will enter "STEP2" and automatically search Bluetooth device by itself, as shown the figure below:



3. The searched Bluetooth devices will permutation displayed under the "device list", as shown below:

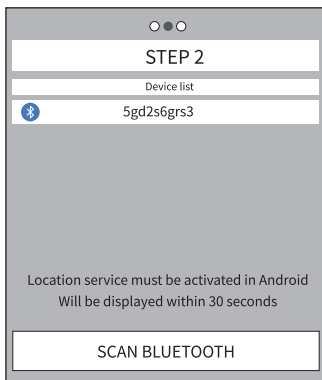


4. Click the appropriate Bluetooth device, APP would connect with the camera Bluetooth. The mobile phone will pop up the window "Connecting,,, please wait ...". After successful connection, the APP would enter into the "STEP 3", and then the camera Bluetooth match successfully with the mobile phone Bluetooth.

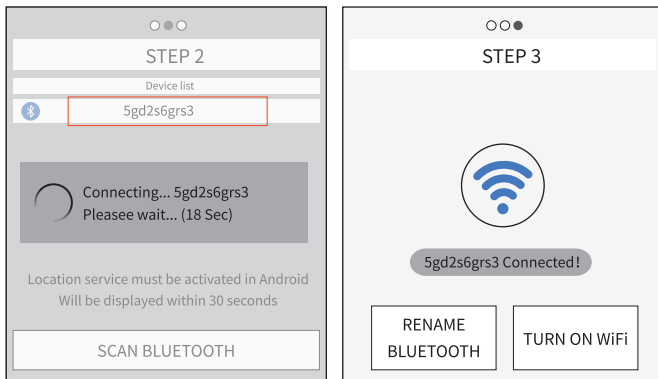


#### 7.4.2 WiFi connection


When the Bluetooth connection success, the APP would enter "STEP 3" as shown below diagram.

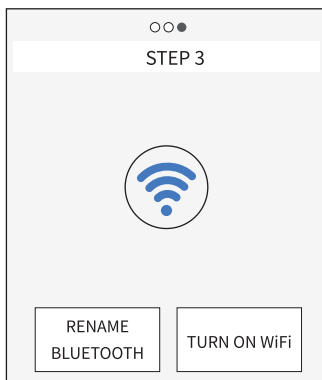

1. Click “RENAME BLUETOOTH”, user could modify the Bluetooth device name accordingly to their own needs, after the modification, click “OK” button and save it. Details as below shown diagram:

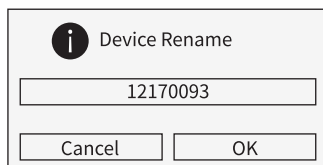

2. Click “TURN ON WiFi”, after 5s countdown, it would jump to the interface of “WiFi SETTING”, Details as below shown diagram:

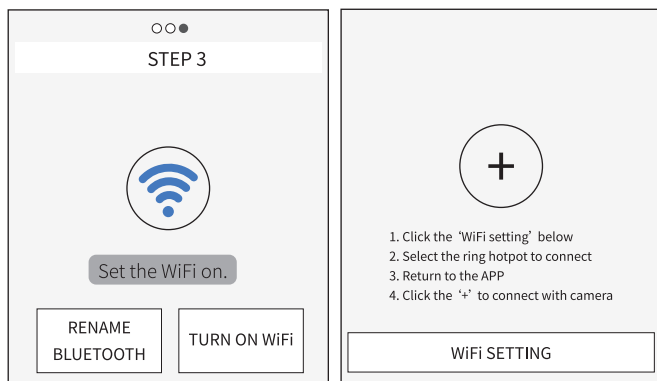


When the camera receives the command to turn on WiFi, the hotspot would be turn on as below shown.




Operate the steps 1~4 following the “WiFi SETTING” interface.

a. Click the “WiFi SETTING” button as below shown.

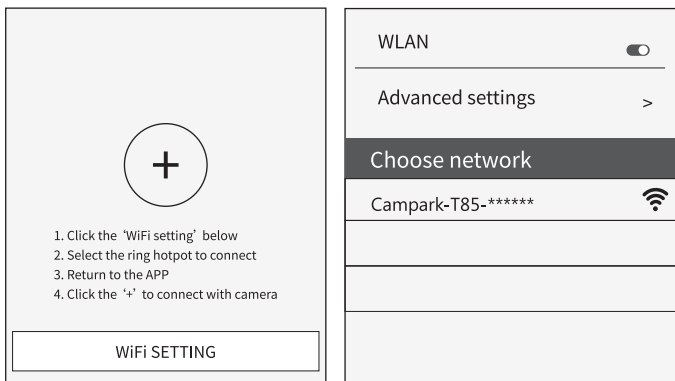


b. Connect with the correct WiFi hotspot, the initial password is 12345678.

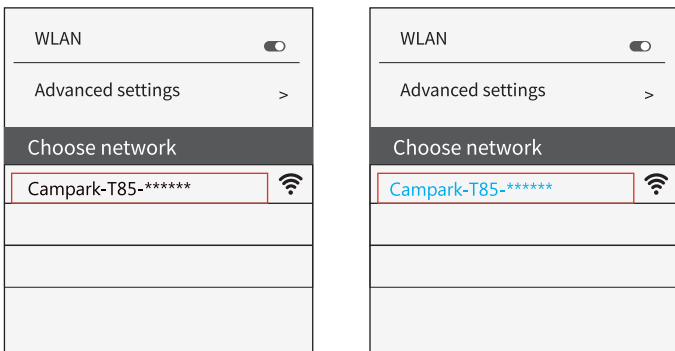



After successful connection, the interface display in the camera as below shown:

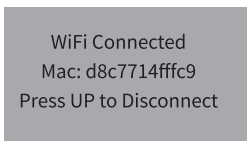

- c. Return back to APP after the WiFi successful connection. And then the APP would automatically connect with camera. or click “+” to manually connect.








1. When the APP and camera connect successfully, the interface as below shown:

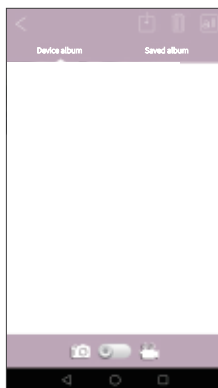


	The connection between camera and mobile phone	
EXIT	Turn off the APP, the Bluetooth and WiFi functions between mobile phone and camera would be turn off at the same time.	
	The display of signal strength indicator	
	Camera battery level display	
	Switch to Video mode	Switch to Taking photo mode
	Mobile phone review pictures or video in the camera	
	Connect the camera to video mode or taking photo mode under the control of Mobile phone	
	Camera System Setting function. <b>Notice:</b> This setting function is synchronized with the camera system setting function. It realizes through the way of wireless.	

2. Click the icon  to enter the pictures review as shown below diagram.



	Select the picture or video to download, and press the button to save files to mobile phone.
	Press this icon to delete the selected the picture or video. After the picture or video is deleted, the file could not be recovered, please use caution.
	Select all the files.
	Toggle Switch, the switch between picture review and video


3. Click the icon  to enter the menu setting, as shown below diagram.

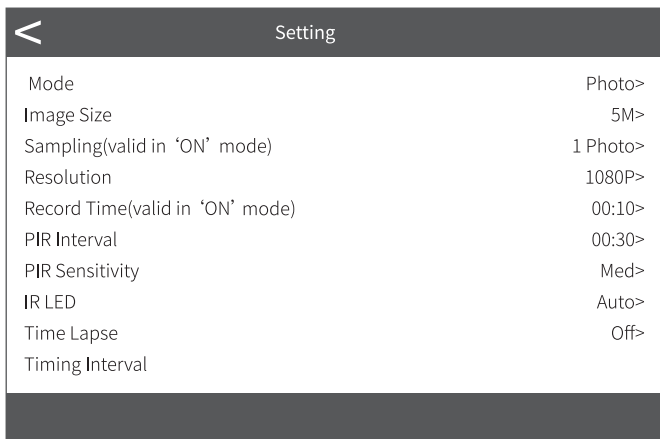

## 7.5. Aligning the camera

The Test mode is advantageous for determining the best possible detection angle and range of the movement sensor. For this purpose attach the camera at approx. 1-2 m height to a tree and align the camera with a desired direction. Move slowly from one side of the observed area to the other. Move parallel to the camera. Try out different angles and distances.

 - The blue LED on the front of the camera indicates that you were detected by a side sensor zone.
- The red LED on the front of the camera indicates that you were detected by a central sensor zone.



In this way you can determine the best position for aligning the camera.

The LED only lights up in the SETUP mode as soon as one of the sensors has detected movement. The LEDs do not light up when in Live mode.

In order to prevent incorrect signals and unnecessary photos, we recommend not using the camera at sunny points and check that no branches are in the active area of the sensor. Optimum alignment is in North or South direction. The detection range of the sensors is approx 120°.

Also check that the camera is set to the correct height in line with the point to be observed. Where necessary, point the camera down for optimum alignment.




### Note:

- Wildlife Camera corresponds to protection class IP 66. The camera is protected against dust and spray water and can thus be used in any weather condition.

## 7.6. Setting up the Live mode

The standard application of the Wildlife Camera is the Live mode. When in this mode, photos are either triggered by movement sensors or at intervals according to the respective setting. To set up the Live mode, switch mode switch to ON position.

The red status LED flashes for approx. 5 seconds after which the camera operates automatically and enters the Standby mode.

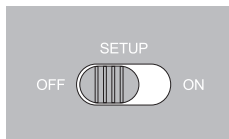

As soon as wild animals or other objects directly enter the detection area of the central sensor zone, the camera starts to record photos and videos.

Where wild animals enter the detection range of the side sensors, the sensors detect the movement and activate the camera. As soon as the wild animals move further into the detection range of the central sensor zone, the camera starts to take photos/videos.

Where after movement has been detected by the side sensors no further movement is detected for five minutes, the camera returns to its Standby mode.

### Advantages of PIR sensors (Passive Infrared Sensors)

In order to save on battery power, an infrared camera is normally in Standby mode in which only the main sensor is active. As soon as the central sensor zone detects wild animals, the camera is switched on and starts taking photos. The time between the activation and the start of shooting is referred to as triggering time.

Where wild animals do, however, move past the camera swiftly, it is possible that the photo only shows the rear part of the body or possibly nothing at all. The Wildlife Camera solves this problem due to the unique design of the lateral PIR sensor zone. The combination of the two lateral sensor zones and central sensor zone produces a 100°-120° induction angle, by far exceeding the angle of an individual sensor.

Where wild animals first pass through the detection range of the side PIR sensor zone, the camera is activated and is ready to start shooting after 0.3 second.

Where the wild animal then slowly enters the detection range of the central sensor, the camera starts shooting and thus records the entire body of the animal. This process takes approx. 0.2 second. Where the wild animal remains only within the detection range of the side sensor zones, the system is designed as follows to prevent the permanent supply of power to the camera:

 
Where the wild animal does not enter the detection range of the central sensor zone and thus does not trigger the sensor, the camera returns to the Standby mode after 5 minutes. Where triggering incidents occur twice in succession only within the detection range of the side sensor zone, the camera is not activated by the side sensor zone but only by the central sensor zone. At a later stage when the wild animal finally enters the detection range of the central sensor zone and does not move rapidly, the photo (based on the standard reaction time of one second) will probably capture the entire body of the animal.

## 7.7. Night recording

During night recording the infrared LEDs (IR LEDs) at the front of the Wildlife Camera provide the light required for taking photos.

Wildlife Camera uses IR LEDs with a long wavelength, to keep red light to a minimum. The provided number of IRLEDs generates a high deflection angle thus allowing night recording at a distance of 3 m to 20 m, without overexposing the object. Reflecting objects can, however, also cause overexposure within this range (e.g. road signs).

Please note that night recording using IR LEDs produces black and white images.



## 7.8. File format

The Wildlife Camera stores photos and videos on the memory card in the folder "\DCIM\MOVIE&PHOTO". Photos are given a file name with extension ".JPG" (Example: "IM\_00001.JPG"), videos, are given the extension ".MP4" (Example: "VD\_00002.MP4").

When in SETUP and OFF mode use the enclosed USB cable to transfer files onto the computer. Alternatively you can insert the memory card in a card reader on the computer.

**The video file can be played with most standard programs, such as Windows Media Player, QuickTime etc.**


## 8. CONNECTING TO COMPUTER

The Wildlife Camera can be connected to a computer using the supplied USB cables to view existing photos/videos.

### System requirements

Windows	Macintosh
<ul style="list-style-type: none"><li>■ Pentium® III or higher</li><li>■ Windows® XP/Vista/7/8</li><li>■ 512 MB RAM</li><li>■ 1GB available hard disk space</li><li>■ Screen resolution 1.024 x 768 or higher</li><li>■ Available USB connection</li></ul>	<ul style="list-style-type: none"><li>■ PowerPC G3/G4/G5</li><li>■ OS 10.3.9 or newer system</li><li>■ 512 MB RAM</li><li>■ 1GB available hard disk space</li><li>■ Screen resolution 1.024 x 768 or higher</li><li>■ Available USB connection</li></ul>

1. Connect the camera to your computer using the USB cable.
2. The camera switches on automatically in the USB mode, irrespective of the selection on the mode switch.
3. The camera installs itself on the computer as an additional drive under the name "Removable storage device".
4. Double click on the device to detect the folder "DCIM".
5. The photos and videos are located in the sub folders of the "DCIM" folder.
6. You can copy or move photo and video files on the computer. Alternatively you can insert the memory card in a card reader on the computer.

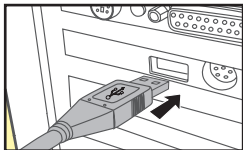

### Note:

- Mac computers show an "Unknown" drive on the desktop. When clicking on this drive, the program "iPhoto" is automatically started.



## 9. TECHNICAL SPECIFICATION

Lens	f=4.3mm F/NO=2.0; FOV=80 °
Screen	2.3" 320(RGB)x240 DOT
Photo Resolution	20M:5120*3840; 16M:4608*3456;12M:4032*3024; 8M: 3264*2448; 5M: 2592*1944 ; 3M: 2048*1536; 2M: 1600*1200
Data Storage	Support SD/SDHC memory card up to 128GB
Video Resolution	1728 x 1296P 30fps
	1920 x 1080p 30fps
	1280 x 720P 30fps
	848 x 480p 30fps
	640 x 360P 30fps
Day/Night Mode	Day/Night, Auto Switching
Detection angle of sensor	60°
Side sensor zone	30°
Range of IR flash	20m
WiFi	2.4 ~ 2.5 GHz 802.11 b/g/n (High-speed up to 150 Mbps)
Bluetooth 5.0 frequency	2.4GHz ISM frequency
IR flash	36pcs 940nm infrared LEDs
Trigger time	0.4s
Storage formats	Photo: JPEG ; Video:MPEG-4(H.264)

System Requirements	IOS 9.0 or Android 5.1 above
Real-time Video Preview	Only supports APP mode, Direct Video Connection, easy to install and test
APP Function	Installation target, parameter setting time synchronization, shooting test, power warning, SD/SDHC card warning, PIR test, full screen preview
Quick Parameter Setting	Supported
Online Data Management	Video, Photos, Events: Support online Viewing, Deletion, Download
Power supply	8x batteries type LR6(AA) external 6V power supply, at least 2.0A(not supplied)
Standby time	Approx. 6 months (ith 8 batteries)



### Note:

- Design and technical specification are subject to change.

## 10. SIMPLE TROUBLE SHOOTING

The camera will not turn on	<ul style="list-style-type: none"> <li>• Please check the batteries if they are installed in proper way.</li> <li>• Check if the battery capacity is low or exhausted. If so, please replace them with new batteries.</li> </ul>
The camera turns off automatically	<ul style="list-style-type: none"> <li>• Please check whether the battery capacity is less than 5%. If so, try to change new batteries for outdoor using or connectAC adaptor for indoor using.</li> <li>• Please check if SD card is full. If so, transfer images and videos to your computer or delete some files in the Replay Mode.</li> </ul>
It shows "SD card Error"	<ul style="list-style-type: none"> <li>• Please ensure that SD card is with class 10 standard or higher level.</li> <li>• Please use the camera to format SD card at the first time.</li> </ul>
Videos are choppy or jumpy when played on a computer	<ul style="list-style-type: none"> <li>• Ensure that the computer system requirements are met.</li> <li>• Ensure MP4 format Video clip can be played on your computer.</li> </ul>
The image is not clear	<ul style="list-style-type: none"> <li>• Please ensure that you removed the protective films on IR LEDs and lens before using.</li> <li>• Please ensure that the lens is not dirty.</li> </ul>
The camera does not take images or record videos	<ul style="list-style-type: none"> <li>• If the memory of SD card is full, transfer images or videos to your computer or delete some files in the Replay Mode.</li> <li>• The memory card is not formatted properly. Format the SD card again or use a new card.</li> </ul>
Camera can not turn off	<ul style="list-style-type: none"> <li>• Once such malfunction occurs, remove all the batteries to reset the camera.</li> </ul>
Forget the password	<ul style="list-style-type: none"> <li>• Please enter the words "OPEN", in case that you forget the password to start the machine.</li> </ul>

The phone couldn't connect WIFI	<ul style="list-style-type: none"> <li>• Check Wifi password is correct.</li> </ul>
Forget the Wifi password	<ul style="list-style-type: none"> <li>• Default setting the camera, then the password is "12345678".</li> </ul>

## 11. SYSTEM INFORMATION, MAINTENANCE AND DISPOSAL TRADEMARK INFORMATION

- Microsoft® and Windows® are trademarks of Microsoft Corporation registered in the US.
- Pentium® is a registered trademark of Intel Corporation. Macintosh is a trademark of Apple Computer Inc.
- SD™ is a trademark.

### 11.1. Care

Do not use any corrosive cleaners, such as methylated spirits, thinners, etc. to clean the camera housing and supplied accessory. When required, the clean system components with a soft dry cloth.

### 11.2. Storage

Always remove the battery from the housing if the camera is not being used for some time and store the battery separately. On a day to day basis and over longer periods the batteries can be kept at a dry location out of the reach of children.

### **11.3. Disposal**

For disposal, separate packaging into different types and dispose of in line with environmental regulations in supplied collection containers. Batteries and storage batteries may not be disposed of in domestic waste. Consumers are obliged by law to return used batteries to communal collection points or dealers selling batteries. Storage batteries and batteries do therefore contain the adjacent symbol.

Correct disposal of product:

The adjacent symbol indicates that electrical and electronic equipment may not be disposed of in domestic waste in the EU. Please use the returns and collection points of your local council or contact your dealer you purchased the product from. This prevents potentially harmful effects on the environment and health as a result of incorrect disposal. For further information contact the respective department of your local council.

## **IF YOU HAVE ANY QUESTIONS OR PROBLEMS.**

**Please contact us by**

USA&Canada      [support@campark.net](mailto:support@campark.net)

Europe            [eu.support@campark.net](mailto:eu.support@campark.net)

UK                [uk.support@campark.net](mailto:uk.support@campark.net)

**We will offer prompt and authoritative reply within 24 hours, and try our best to resolve your problem ASAP More Safe Guarantee with Campark!**  
**If you are not satisfied with our product. Please tell us about your thought. That will be much appreciated.**