

eHam.net Home

FAQ

Welcome Anonymous

Become a member! or Login!

Call Search



New to Ham Radio? Mv Profile

Community

Articles **Forums** News Reviews Friends Remembered Stravs **Survey Question**

Operating

Contesting **DX Cluster Spots** Propagation

Resources

Calendar Classifieds Ham Exams Ham Links **List Archives News Articles Product Reviews QSL Managers**

Site Info

eHam Help (FAQ) Support the site The eHam Team Advertising Info **Vision Statement** About eHam.net

QSL Managers



Ham Links



HOME HELP SEARCH

eHam > eHam Forums > Mods And Repairs > Kenwood TS-440S ALC Adjustment

Pages: [1] Go Down

Author

« previous next » PRINT

Topic: Kenwood TS-440S ALC Adjustment (Read 259) times)



KB4W

Member



Kenwood TS-440S ALC Adjustment

« on: November 05, 2002, 11:26:11 PM »

Posts: 2

Hi.



IGNORE

Could someone remind me how to adjust the transmit alc on my Kenwod TS-440S. As many know, the ALC from the factory is a little on the "overly protective" side. A simple alc adjustment was described by WB6NOA in a Popular Communications article from 1987, but I misplaced the magazine when I moved. Seems like it might have been a variable resistor on the if board, but I can't remember.

Thanks for the help.

David, KB4W



KG6KVL

Memher



Kenwood TS-440S ALC Adjustment

« Reply #1 on: November 06, 2002, 09:04:45 PM »

Posts: 1



IGNORE 🦹

Hi David. To adjust the ALC (RF output power) find the VR1 on the rear panel (you do not have to open the radio), it is located about 2 inches right of the ACC3 type

RCA terminal or in the 3rd hitsink slot. All you need is a flat screw driver but I do not remember if you have to turn clockwise or counterclockwise to increase the output power, check that with the radio pwr meter.

73's, Jaime, KG6KVL

Logged

KB4W

Member




Kenwood TS-440S ALC Adjustment

« Reply #2 on: November 06, 2002, 09:50:59 PM »

Posts: 2





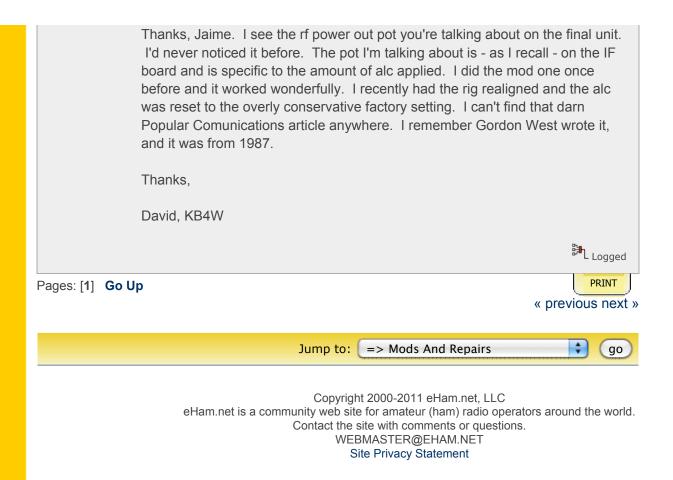



Powered by SMF 1.1.11 | SMF @ 2006-2009, Simple Machines LLC

