

PRO-92 CHEAT SHEET

MANUAL Mode

FUNC 2 Switch Open/Closed Mode
FUNC DELAY Toggle delay mode
FUNC UP/DN Jumps to next bank
FUNC PRI Set priority channel
FUNC 9 Adjust Contrast
FUNC LIT Keypad lock
FUNC L/OUT Review locked out channels - repeat
for each channel
FUNC TUNE Set current frequency to TUNE
frequency
FUNC SEARCH Search programming mode
FUNC TRUNK Same as PGM TRUNK ?

SCAN mode (when stopped on a frequency)

FUNC 2 Switch Open/Closed Mode
FUNC TUNE Set current frequency to TUNE
frequency
FUNC DELAY Toggle delay mode
FUNC PRI Set priority channel
FUNC LIT Keypad lock
FUNC STEP Pause/unpause scanning
FUNC SEARCH Search programming mode

SEARCH Mode

FUNC ENTER Store current freq to ch.9xx
FUNC STEP Pause/Resume search
FUNC SEARCH Access 10 current search ranges
FUNC 5 Pick from all 60 search ranges
FUNC TUNE set current freq. to TUNE freq.
FUNC L/OUT View locked out freqs (up/dn to
scroll)
FUNC UP Jump to next bank in lockout review
mode
FUNC 4 Clears all locked out freqs in current
bank
FUNC DELAY Toggle delay mode

PROGRAM mode(s)

FUNC 6 Text tag for current bank
FUNC UP/DN Jump to next bank
FUNC 3 Clears all stored IDs in bank
FUNC TUNE Store TUNE freq in current ch.
FUNC CL Clear stored freq in current ch.
FUNC PRI Make current channel priority ch.
FUNC STEP Scroll down through PL/DPL tones
FUNC L/OUT Scroll through all locked out
channels
FUNC 2 Open/Closed bank mode

FUNC DELAY Toggle delay mode
TRUNK FUNC 8 Set block size mode (Motorola
only)
TRUNK FUNC CL Clear current ID

TUNE mode

FUNC UP/DN Jump in 1 MHz steps
FUNC ENTER Store current freq. to ch. 9xx

WX mode

FUNC WX WX standby mode (for SAME or 1050 Hz tone)