

PROGRAMMING THE XT-75LCD TWO-WAY LCD SCREEN REMOTE TRANSMITTER

Important Note: This program mode is for XT-75LCD two-way LCD transmitter programming only; do not program other style transmitter on this mode.

Note: This mode will only retain the last 2 remote transmitters programmed. If the transmitter memory is exceeded, the security system will start deleting transmitters from memory in chronological order.

The two-way LCD screen remote transmitter can be program to operate this system. The two-way remote transmitter actively gives an immediate report to the remote transmitter on any violations occurred to your vehicle both by visual graphic icon and audio sound.

When you press a button of a two-way remote transmitter, you can make sure that your command has been correctly delivered to the system in your vehicle. The LCD screen will display a graphic icon as well as a confirming melody sound from your two-way remote transmitter.

Enter:

1. Turn the Ignition 'switch 'OFF/ON' 3 TIMES and stay in ON position. Within 15 seconds.
2. Push the Valet switch **6 times** holding in on the 6th push, until long chirp is heard. Then release the valet switch. You are now in the two-way LCD screen remote Transmitter programming mode.


Program:

1. Press the Lock button on the transmitter until the siren responds with a confirming chirp; the first transmitter is now programmed.
2. Press the Lock button on the second transmitter until the siren responds with a confirming chirp; the second transmitter is now programmed.

Exit:

Turn Ignition to 'OFF' position, or leave it for 15 seconds. 3 long chirps & 3 parking light flashes will confirm exit.


Note: A Maximum of (2) two-way LCD screen remote transmitters can be programmed.

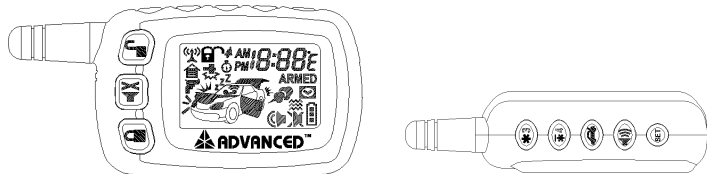

XT-75LCD TWO-WAY LCD SCREEN REMOTE TRANSMITTER

Programming the XT-75s Standard transmitter

Note: This mode will only retain the last 4 remote transmitters programmed. If the transmitter memory is exceeded, the security system will start deleting transmitters from memory in chronological order

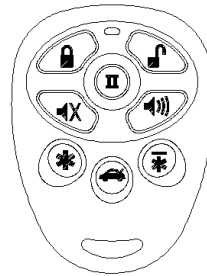

Important Note: This program mode is for XT-75S remote transmitter programming only; do not program the XT75LCD two-way transmitter on this mode.

Enter:

1. Turn the Ignition 'switch 'OFF/ON' 3 TIMES and stay in ON position. Within 15 seconds.
2. Push the Valet switch **3 times** holding in on the 3rd push, until long chirp is heard. Then release the valet switch. You are now in the Transmitter programming mode.

Program:

1. Press any button on transmitter one until the siren responds with a confirming chirp. The first transmitter is now programmed.
2. Press any button on the second transmitter until the siren responds with a confirming chirp, the second transmitter is now programmed.
3. Apply the same procedure to program 3rd and 4th

Exit:

Turn Ignition to 'OFF' position, or leave it for 15 seconds. 3 long chirps & 3 parking light flashes will confirm exit.