



CMG/CMF Series Solar Charge Controller

(Full parameters display in the LCD)

Instruction Manual

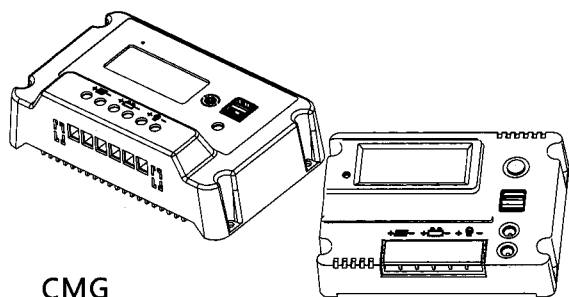

CMG

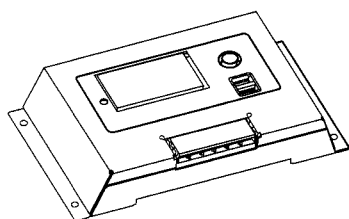

CMF

Model: CMG-2410 , CMG-2420 , CMG-2430 , CMG-2440 ,
CMG-2450 , CMG-2480
CMG-48100 , CMG-48150 , CMG-48200
CMG-96100 , CMG-96150 , CMG-96200
CMF-2405 , CMF-2410 , CMF-2415 , CMF-2420

Description of product model:

CMG-24 10

↓ ↓
10 represents the maximum discharge current is 10A
24 represents the maximum voltage, means 12V/24V

auto work

Thank you very much for selecting our product! This manual offers product overview, protection, installation instruction, status instructions, troubleshooting and technical data etc. Please read this manual carefully before using the product.


Product overview

1. With LCD to display all parameters, the LCD has rich contents, the users can intuitively know the working condition of the controller.
2. With built-in energy-saving backlight LCD, display better and more power-efficient.
3. With SMPS DC12V and USB 5V stabilized voltage output, available for DC lamp and phone charging.
4. With output switch, intelligent control, easy to operate;
5. The system power adopts switching mode power supply which can reduce the quiescent current.
6. With separated temperature detected circuit, with high precision temperature compensation function.
7. With exposed terminals, the wiring more convenient, what's more, the CMF series with metal shell.

8. Use single-chip microcomputer control which makes the controller has the advantages of intelligent, strong adaptability, reliable function.
9. Use PWM upgrade control scheme to WPC mode, which can improve system efficiency and prolong the life span of the battery.

Protection

1. Over-load protection
2. Short circuit protection
3. Lightning protection
4. Under-voltage protection
5. Over-charging protection
6. Reverse Polarity Protection

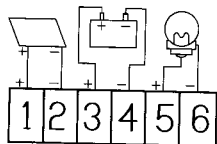


Installation Instructions

Open the top cover of controller and connect the wire with terminals as the diagram on the top cover of it.

1. Connect the "+" , "-" Poles of the battery to the corresponding ports of controller (the third and the fourth one from left).
2. Connect the "+" , "-" poles of the solar panel to the corresponding ports of controller (the first and the second one from left).
3. Connect the "+" , "-" poles of the load to the corresponding ports of controller (the fifth and the sixth one from left).

Note: If there is connection error, it may damage your controller.

Status instructions

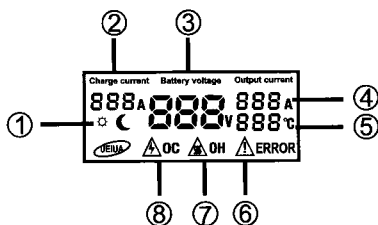

① Solar status display (day night display)	② Charge current display
③ Battery voltage display	④ Output current display
⑤ Environmental temperature display	⑥ Warning – error display
⑦ Warning – over heated protection	⑧ Warning – over current protection

The charge display:

During the day the LCD displays the sun, while charging it displays the charge current directly.

While at night it displays the moon and the charge current parameter will disappear.


Battery voltage display: always display the current battery voltage




Battery under voltage display: when the battery is in the state of under voltage, (in the 12V system the battery voltage is less than 10V, in the 24V system the battery voltage is less than 20V), at this time the load output is not allowed and the output current will displays "OFF" .

The load display: (the default output switch is open)

1. In the 12V system, when the battery voltage is less than 10.5V, the output current displays "OFF", at this time the load output is not allowed. When the battery voltage returns to 12V, the load output restart and displays the output current.



2. In the 24V system, when the battery voltage is less than 21V, the output current displays "OFF", at this time the load output is not allowed. When the battery voltage returns to 24V, the load output restart and displays the output current.








3. When the load output overload or short circuit occurs, the controller will start the protect function automatically, and then turn off the load output, it displays "OC" and "ERROR". The output protection will automatically try to recover after 10s, if the short circuit has been removed, the load output will start to work and displays the output current.



Troubleshooting

When the following phenomenon happens, please check as follows

Phenomenon	Trouble shooting
The LCD cannot display	Check the battery wiring whether is well connected or whether the voltage of the battery is normal or not.
When there is adequate sunshine, it displays 	Check the PV and battery wire whether is well connected or tight connection or not.
The charge current is quite low or the charge current keep flashing	1. The battery is full charged and the system enters into protective charging. 2. The sunshine of the solar panel is insufficient.
The output current displays the load cannot start 	1. Reference to the system wiring diagram, check the system whether is well connected or not. 2. Check the power of the battery, the load will start only when the battery voltage is Normal. 3. Connect the solar module, charge the battery until it reach to the normal state.
The image  and  flickers, the output current displays  the output terminal without voltage	When in the state of over current or short circuit protection, the controller will return to work automatically after finish trouble shooting for 10 seconds.
Other phenomena	Check the wiring whether is tight or not, and the automatic identification of 12V/24V system is correct or not.

Note: We keep right to change and update without prior notice.

Technical Data

Model	CMG-2405 CMF-2405	CMG-2410 CMF-2410	CMG-2415 CMF-2415	CMG-2420 CMF-2420	CMG-2430	CMG-2440
Rated charge current	5A	10A	15A	20A	30A	40A
Rated discharge current	5A	10A	15A	20A	30A	40A
USB output voltage	5V					
Total USB output current	3A					
DC output voltage	12V(only CMG)					
Total DC output current	2A(only CMG)					
Overload,short circuit protection	1.5 times by rated current					
Short circuit recovery time	10s					
Open circuit voltage of solar panel	40V					
No load loss	0.05W				0.3W	
Over voltage protection	15V; ×2/24V					
Float charge voltage	14V; ×2/24V					
Discharge recovery voltage	12V; ×2/24V					
Over discharge voltage	10.5V; ×2/24V					
Control mode	software intelligent control					
Working temperature	-35℃ ~ +55℃					

Model	CMG	CMF	CMG2430/2440
Dimension (L×W×H)	135*100*30(mm)	201.6*108*37.1(mm)	162*100*50(mm)
Weight	275g	560g	

*Parameters may customized by customers.

Dimension Figure

